PAD-80 Quick Operation Table

Structure of the PAD-80

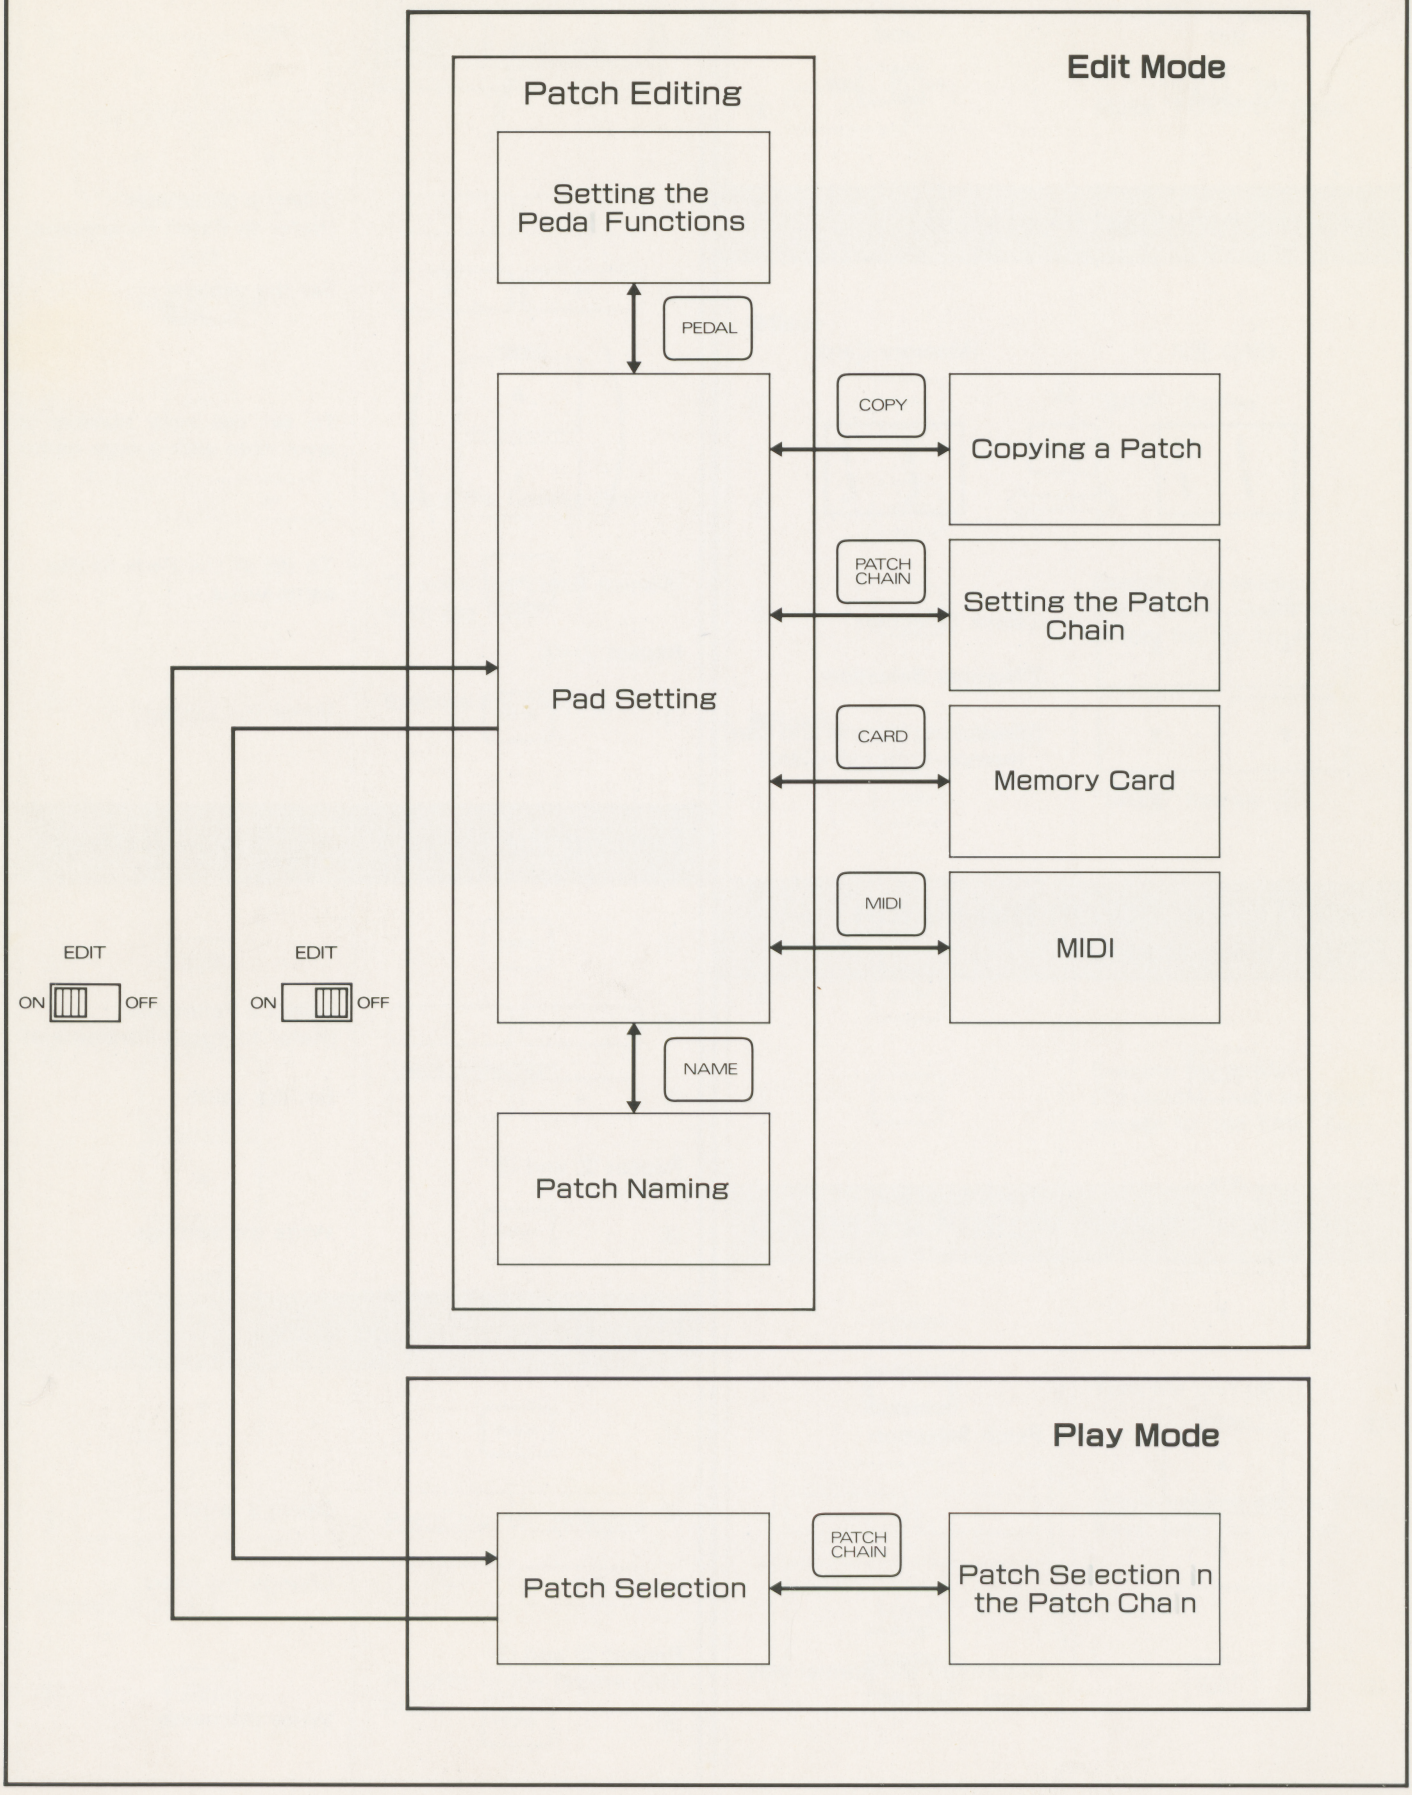

Mode Selection

Play Mode

EDIT

ON OFF

Edit Mode

EDIT

ON OFF

Patch Selection (Play Mode)

PAD-80)

Memory Card)

③

CARD

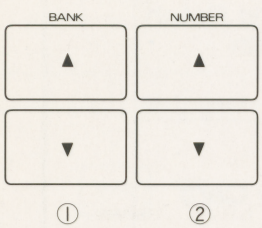

①Bank Selection

②Number Selection

③Switching Internal and Card memory(Internal↔Card)

Patch Selection in the Patch Chain (Play Mode)

① PATCH CHAIN

② BANK ▲ ▼ Track Selection

③ NUMBER ▲ ▼ Patch Selection

④ PATCH CHAIN Returns to the normal play mode

Pad Settings (Edit Mode)

①

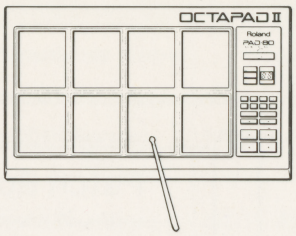

Hit the pad to be edited

② ◁ ▷ Select a parameter (Refer to Patch Parameters)

③ ◄ ► Set the value

NUMBER ▲ ▼ To set the note number or layer note with a note name

④ ALL To set all the Pads to the same value

Repeat ①–④

⑤ ENTER Write the settings

Setting the Pedal Functions (Edit Mode)

① PEDAL

② ◁ ▷ Select a Parameter (Refer to Patch Parameters)

③ ◄ ► Set the value

Repeat ② and ③

④ ENTER Write the settings

Patch Naming (Edit Mode)

① NAME

② ◁ ▷ Select a letter

③ ◄ ► Change the letter

Repeat ② and ③

④ ENTER Write the name

Copying a Patch

① EDIT ON OFF

② BANK ▲ ▼ NUMBER ▲ ▼ — Select the destination Patch

③ EDIT ON OFF

④ COPY

⑤ ◄ ► — Select the Source Patch

⑥ (NAME) — To copy the patch name with the Patch

⑦ ENTER — Execute the copying

Setting the Patch Chain (Edit Mode)

① PATCH CHAIN

② BANK ▲ ▼ — Track Selection

③ NUMBER ▲ ▼ — Step Selection

④ ◄ ► — Patch number selection

Repeat ③ and ④

⑤ PATCH CHAIN — Returns to the normal Edit mode

Memory Card (Edit Mode)

●When you use a card for the first time

① CARD — "CHANGE" flashes

② ◁ ▷ — Make "FORMAT" flash

③ ENTER — Patch data in the internal memory is written on a card

●Save

① CARD — "SAVE" flashes

② ENTER

③ ENTER — Execute the saving (To cancel push any key except for the Enter Key)

●Road

① CARD — "SAVE" flashes

② ◁ ▷ — Make "LOAD" flash

③ ENTER

④ ENTER — Execute the loading (To cancel push any Key except for the Enter Key)

Calling the Fastory Preset Programs

POWER ON/OFF — Turn the unit off

◄ ► — While holding the two Value Keys turn the unit on

POWER ON/OFF

MIDI (Edit Mode)

●Setting the Basic channel System Chain and Soft Thru

① [MIDI]

② [◁] [▷] Function Selector

③ [◄] [►] Set the value

④ [MIDI] Returns to the normal Edit mode

●Data Transfer via MIDI

(Receiver)

① [MIDI]

② [◁] [▷] Make "LOAD" n MIDI Bulk flash

③ [ENTER] The unit is n the receiving stand-by mode

(Transmitter)

① [MIDI]

② [◁] [▷] Make "DUMP" in MIDI Bulk flash

③ [ENTER]

([PATCH CHAIN]) To transmit Track data in the Patch Chain

④ [◄] [►] Select a Patch number (Track Number) to be transferred
To transfer all the Patches (Track data set to "ALL"

⑤ [ENTER] Execute the transfer

Patch Parameter Table

●Parameters which can be set for each Pad.

Parameter Name	Display	Variable Range
MIDI Channel	MIDI CHANNEL	1 16
Note Number	NOTE NUMBER	0 127 C−−G9
Gate Time	GATE TIME	0 20−4 00(a second)
Velocity Curve	VELOCITY CURVE	1 7
Sensitivity	SENSITIVITY	1 16
Program Change	PRG CHANGE	OFF 1 128
Layer	LYR	0−127 C G9
Layer Select	LYR SELECT	MIX/V−MIX/V−SW
Pan	PAN	OFF −31 +31

●Parameters related to the Pedal Functions

Parameter Name	Display	Variable Range
MIDI Channel	MIDI CHANNEL	1 16
Modulation Delay	MOD DELAY	OFF/0.04− 00(a second)
Modulation Depth	MOD DEPTH	OFF 1−60
Bend Select	BEND SELECT	OFF + /
Bend Depth	BEND DEPTH	OFF 1 60
Bend Decay	BEND DECAY	1−60
Dynamic Bend	DYNAMIC BEND	ON/OFF
After Touch	AFTER TOUCH	ON/OFF
After Touch Threshold	A T THRESHOLD	1 60

Roland

26025234 '88-6-B3-2S